



PTE0105

Technical Manual



Table of Contents

Introduction	3
Product Overview	3
POS Section	4
Take Apart	5
Before You Start	5
Important Instructions	5
Tools to prepare	5
Host section	5~8
Customer display section	9



Introduction


Product Overview




1. 15" high-definition main screens
2. The host switch and lamp
3. Base
4. Customer display
5. Three-track MSR.

POS section

Main Display

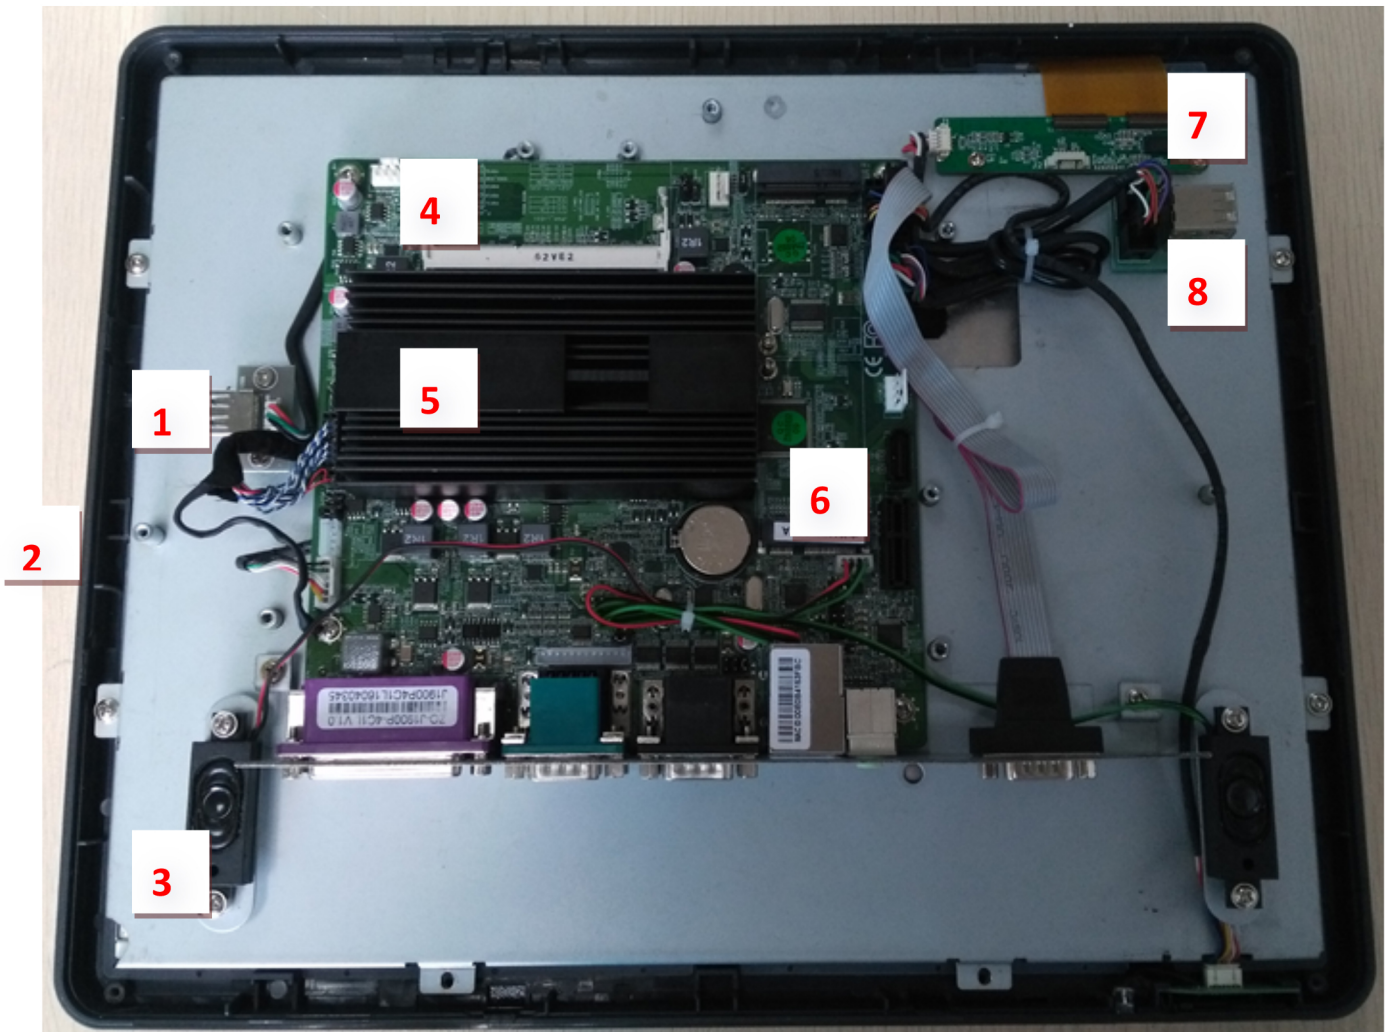

Customer Display

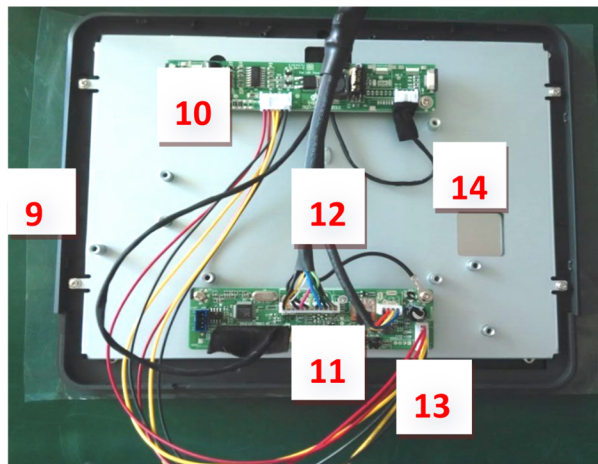

No.	Item	Quantity
1	USB interface	1
2	Top case	1
3	Speaker	1
4	Memory slot	1
5	Main board	1
6	Mini SATA SSD	1
7	Touch driver	1
8	USB	1
9	Top case for customer display	1
10	Backlight driver	1
11	Monitor driver	1
12	VGA cable	1
13	Backlight cable	1
14	LVDS cable	1

Take Apart

Before You Start

Important Instructions

- 1. Read these instructions completely before you begin.***
- 2. Follow all instructions.***
- 3. Pay attention to all warning.***


Tools to prepare

- Screwdriver

Please follow these steps to take apart PTE0105.

Host section

1. Pull down the plastic hook on the back cover, then take out the host section.

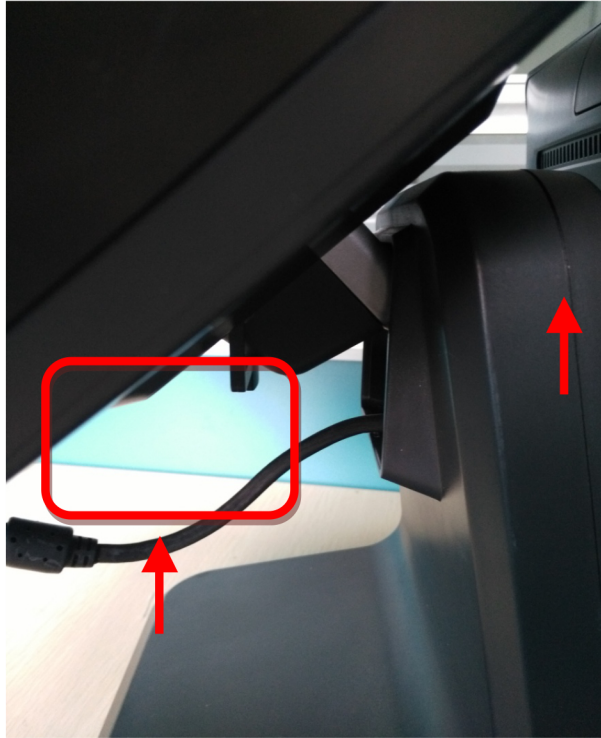




2. Unscrew the screw in the middle of back cover, then remove the rear shell.






3. Unscrew those two screws on the upper side, take away the metal back cover, then see the main board insides.

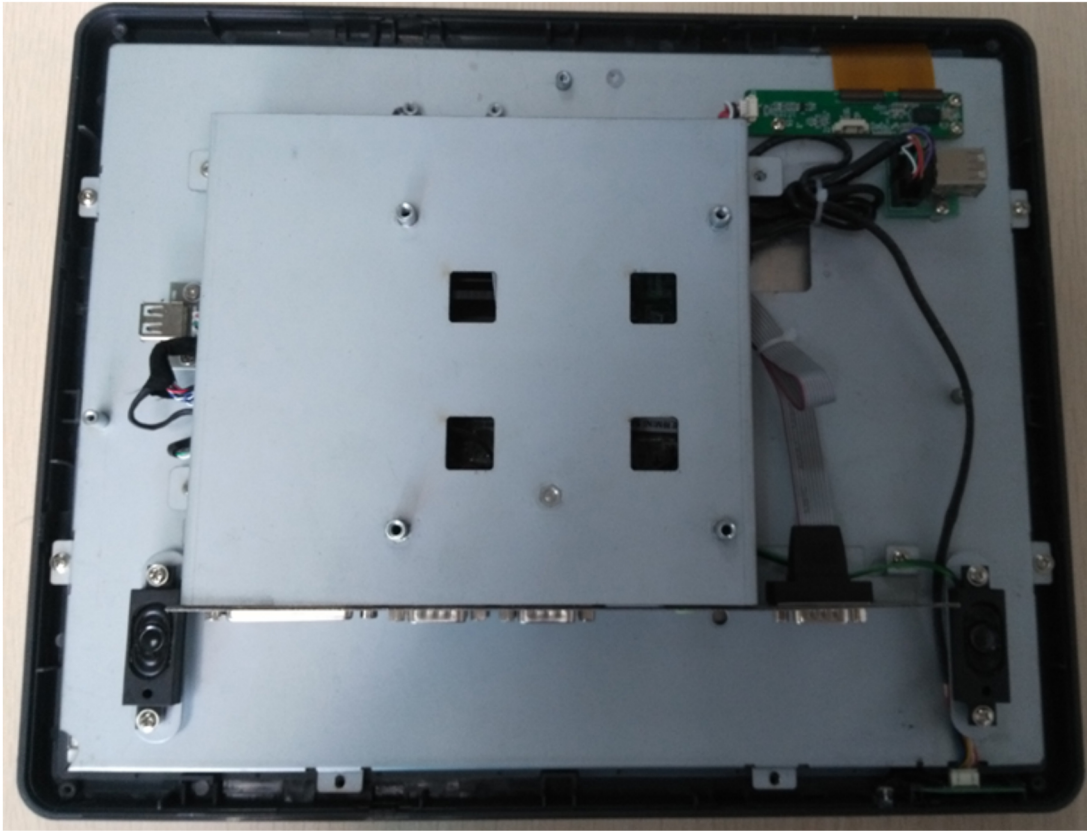


4. To replace the main board, just unscrew those four screws in the corner of main board.


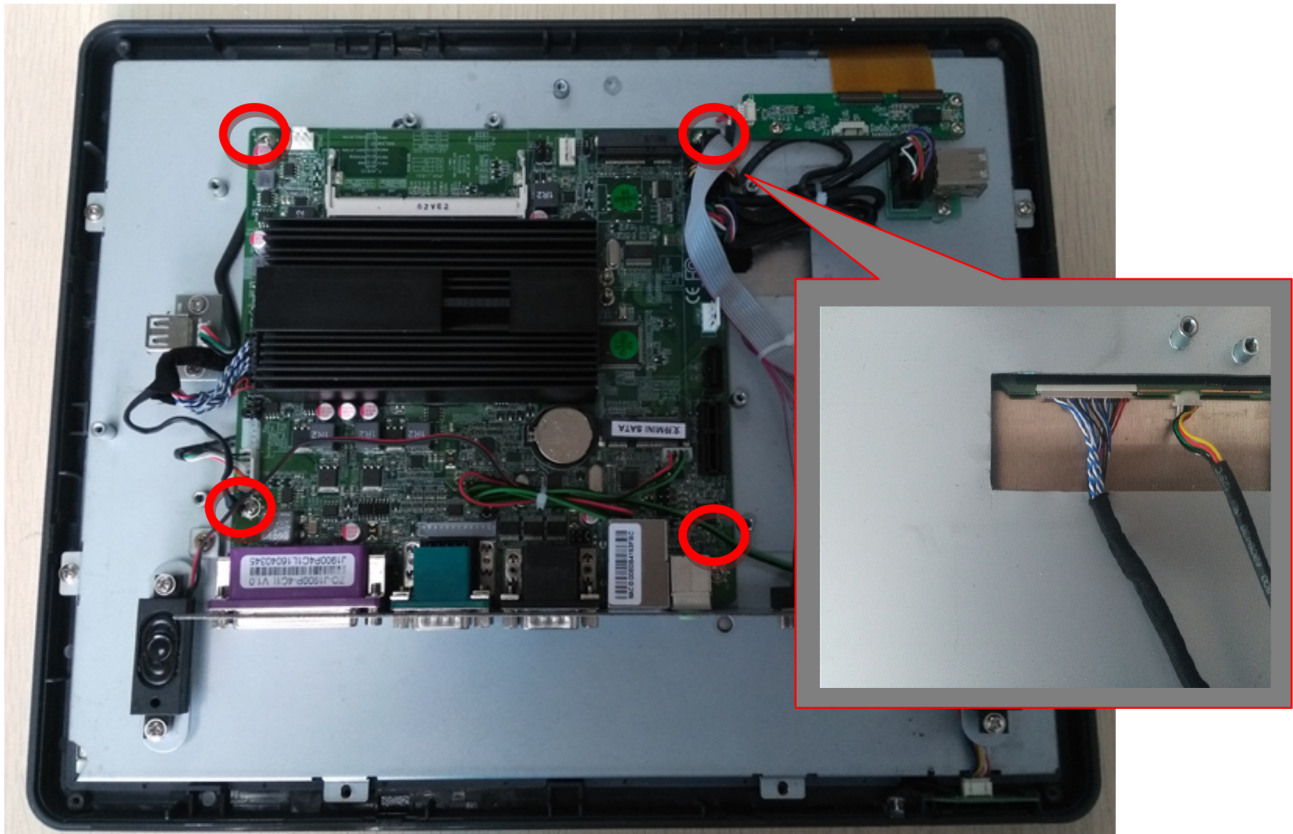


Customer display

1. Pull down the plastic hook on the back, then lift the Customer display upwards.

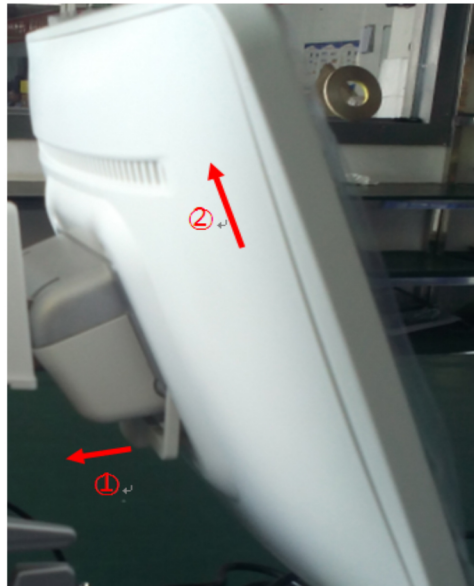

2. Unscrew those four screws in the middle, then pull down the back cover, and you will see the metal shield.

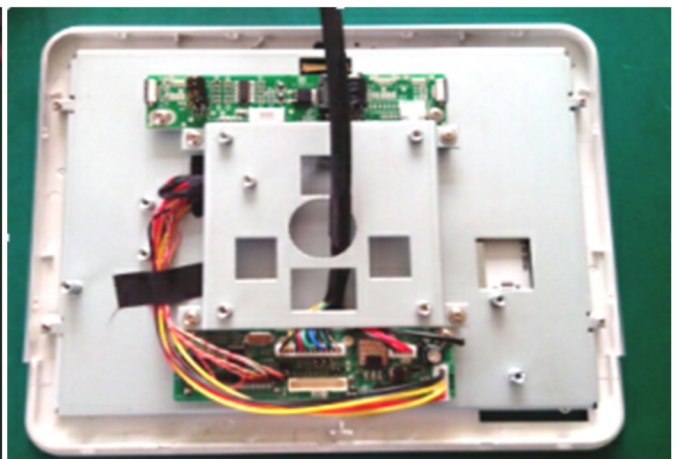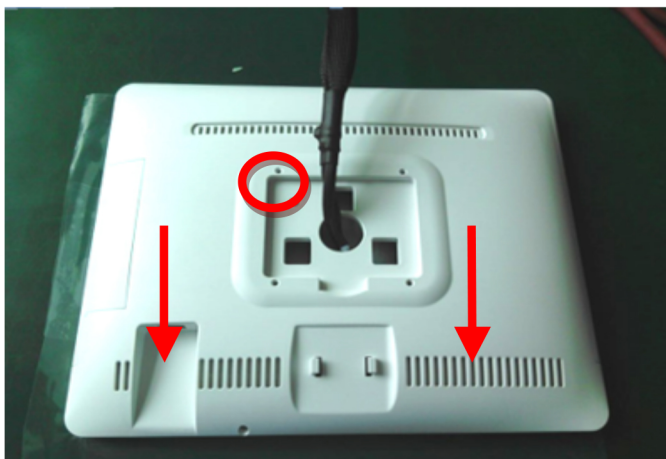

3. Unscrew screws on the metal shield, then you will see cables and boards inside. If anything, you can exchange them.

